

Model coding

When the standard electronic control units have been changed, the control unit must be recoded with the appliance programmes (see table). Note: If appliances feature 3 programmes / buttons, program the control unit before attaching the panel box.

1. Selecting the model coding:

Simultaneously press and hold down buttons S2, S3, S4 and S5 and press the main switch.

For as long as buttons S2 to S5 are held down, the LEDs L2 to L5 flash. The current coding is displayed when buttons S2 to S5 are released. (see Code table)


2. Selecting the model:

The different codings can be set according to the programme symbols (see table) by pressing the S2 button.

3. Saving the coding:

The new coding is saved by switching off the appliance.

Code table:

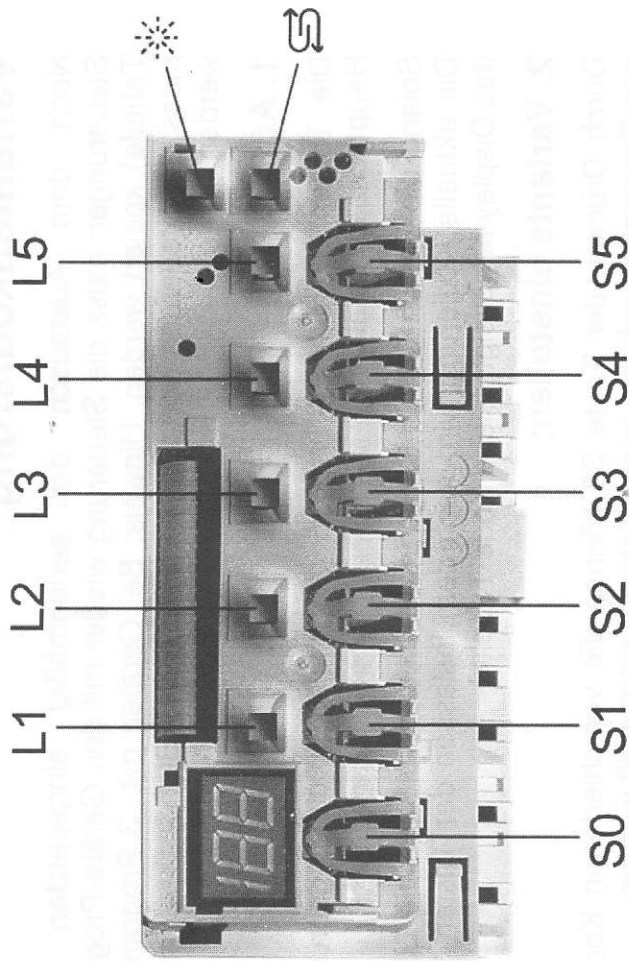

	Button					Display
	S0	S1	S2	S3	S4	
Timer programming		Intensive	auto	ECO	Gentle	25
Timer programming		auto	ECO	Quick	Prerinse	26
Timer programming		Intensive	auto	ECO	Quick	27
Timer programming		OK	auto	ECO	Quick	28
Timer programming		auto	ECO	Gentle	Quick	29

